HOSE PROTECTION – RWA WIRE ARMOUR

RWA
WIRE ARMOUR

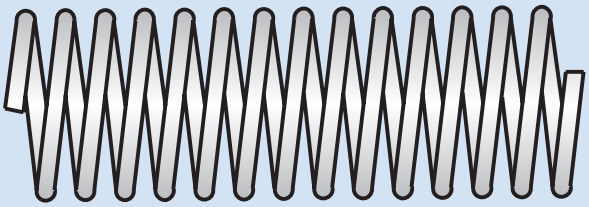

RECOMMENDED FOR:
Protection for Hose Cover in arduous operating conditions; especially against abrasion and deep gouges, thus prolonging the life of the Hose.

CONSTRUCTION:
Spring Steel Wire; galvanised for corrosion protection.

TEMPERATURE RANGE:
Suitable for use with all RYCO Hoses at their published temperature ranges.

ASSEMBLY INSTRUCTIONS:
1. Slide RWA Wire Armour over hose after first end of hose assembly is completed.
2. Then complete second end of hose assembly.

STANDARD LENGTH:
6 metres (19.7 ft) in all sizes.

WIRE ARMOUR			HOSE SERIES																						
PART NO	NOMINAL ID mm	NOMINAL ID inch	T3000A/D/S	T3600A/D/S	T4000A/D/S	T5000A/D/S	T6000A/D/S	H3000A/D/S	H4000A/D/S	H5000/A/D/S	H6000A/D/S	T1A/D/S	T2A/D/S	T2C	TXA2D	DF2A	E2	TJ2D	H12A/D/S	R4SHA/D	R4SPA/D	T5	D2B	MS1000	CS1000
RWA-12	12	0.47																							
RWA-16	16	0.63	-4,-5	-4,-5	-4	-4	-4					-4,-5	-4			-4	-4					-4,-5			
RWA-20	20	0.78	-6	-6	-5,-6	-5,-6	-5,-6					-6	-5	-4,-5		-6	-5	4				-6			
RWA-21	21	0.83	-8	-8					-6	-6	-6		-6	-6			-6	-5				-8		-8	-8
RWA-23	23	0.91			-8	-8	8					-8	-8		-8	-8	-8		-6		-6				
RWA-27	27	1.06	-10	-10	-10	-10			-8, -10	-8	-8	-10		-8, -10		-10	-10		-8		-8	-10		-10, -12	-10, -12
RWA-30	30	1.19	-12	-12	-12	-12				-10	-10	-12	-10		-10	-12			-10		-10	-12			
RWA-31	31	1.22								-12			-12	-12	-12		-12								
RWA-34	34	1.34							-12		-12								-12	-12	-12	-16		-16	-16
RWA-39	39	1.52	-16	-16	-16				-16	-16	-16	-16		-16		-16	-16			-16					
RWA-41	41	1.61											-16		-16				-16		-16	-20		-20	-20
RWA-49	49	1.93						-20	-20	-20	-20	-20	-20	-20	-20				-20	-20		-24		-24	-24
RWA-56	56	2.2						-24	-24	-24	-24	-24	-24	-24					-24	-24	-20		-24		
RWA-61	61	2.4																			-24	-32		-32	-32
RWA-68	68	2.68						-32	-32			-32	-32	-32					-32				-32		
RWA-75	75	2.95								-32	-32									-32	-32				

PART NO	NOMINAL ID mm	NOMINAL ID inch	BT1	RQP1	RQP2	RQP5	RQP6	TW1	PW2	SR	SRF	RTH1	FB2	M1	MP1	M2	PL1	PL1D	M2G	TP7, TP7N	TP7T, TP7TN	TP8, TP8N	TP8T, TP8TN	TP3000	TPGL
RWA-12	12	0.47										-4								-3					-2
RWA-16	16	0.63	-4,-5	-4,-5	-4	-4,-5	-4,-5					-6,-8		-4,-5	-4	-4	-4,-5	-4,-5	-4	-4,-5	-4,-5	-4	-4	-4	
RWA-20	20	0.78	-6	-6	-5	-6	-6	-6	-4,-5					-6	-6		-6	-6		-6	-6	-6	-6	-6	
RWA-21	21	0.83			-6	-8	-8		-6			-10	-6			-6	-8	-8	-6			-8	-8		
RWA-23	23	0.91	-8	-8	-8			-8					-8		-8					-8	-8				
RWA-27	27	1.06	-10	-10		-10	-10					-12	-10		-10	-8	-10	-10	-8					-8	
RWA-30	30	1.19	-12	-12	-10	-12	-12								-12		-12	-12		-12					
RWA-31	31	1.22			-12							-16													
RWA-34	34	1.34				-16													-12						
RWA-39	39	1.52	-16							-12	-12									-16					
RWA-41	41	1.61		-16	-16	-20				-16	-16														
RWA-49	49	1.93			-20	-24					-20														
RWA-56	56	2.2			-24						-24														
RWA-61	61	2.4				-32																			
RWA-68	68	2.68			-32						-32														
RWA-75	75	2.95																							